

A1

High Performance Bluetooth Speaker User Guide



Important Safety Instructions

FCC Compliance Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help. Caution: To comply with the limits for a FCC Class B computing device, always use any shielded signal cord supplied with this unit. The Federal Communications Commission warns that changes or modifications of the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.Radio Frequency Interference Statement
- Warning:
This is a Class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

European Union Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)
This symbol on the product(s) and / or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with you national legislation. For business users in the European Union
If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information. Information on Disposal in other Countries outside the European Union This symbol is only valid in the European Union. If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

Safety Comments

The appliance is only suitable for moderate climates.
The maximum ambient temperature during use of the appliance must not exceed 40°C/105°F.
Do not drop the appliance or expose it to any other type of impact.
Do not place the appliance in an area exposed to heat, direct sunlight, dampness, moisture, rain, vibration, shock, dust or sand.
Only use a dry brush or cloth to clean the appliance.
Note:
Use this appliance in a temperature range between -20°C and 45°C (-4°F and 113°F).

Symbols Used:

Do not dispose of the appliance along with normal waste.

Recycle the appliance.

Protection class III appliance (ONLY FOR CLASS III EQUIPMENT)

The test was performed according to the following European standards:
Draft ETSI EN 301 489-1 V2.2.0(2017-03); Draft ETSI EN 301 489-17 V3.2.0 (2017-03); ETSI EN 301 893 V2.1.1 (2017-05); ETSI EN 300 328 v2.1.1 (2015-11);
EN 62311:2008

3. Specifications

Bluetooth Version	V5.3
Connection Distance	30 Meters or 99 Feet (Open Area)
Rated Power	50W RMS
Battery Capacity	2500 mAh
Power Supply	5V/2.1A
Frequency Response	80Hz - 18kHz
Charging Port	Type-C
Drivers	25W x 2
Playing Time	Up to 12 Hrs
Charging Time	2.5 Hours
IP Ratings	IPX6

4. Button Functions

Button	Functions	Descriptions
⏻	Power On / Off / TWS Pairing	1. Press and hold for 3 seconds to turn the speaker on or off. 2. After powering ON, quickly press twice to enter TWS pairing mode.
▶	Play/Pause	1. Click to play/pause music, answer an incoming call, or hang up a call. 2. Press and hold for 2 seconds to reject an incoming call. 3. Hold for 2 seconds to disconnect from Bluetooth devices. 4. Double-click quickly to redial the last phone number.
⏮	Volume Down / Previous Song	1. Click to decrease the volume. 2. Press and hold for 2 seconds to play the previous song.
⏭	Volume Up / Next Song	1. Click to increase the volume. 2. Press and hold for 2 seconds to play the next song.
M	Input Mode / EQ Switch	1. Click to switch input modes: Bluetooth, Aux-in, and TF card. 2. Press and hold to switch EQ modes: Heavy Bass (no light), Pop (white light), and Vocal (green light).


5. Bluetooth Pairing

Power on the speaker, and the blue LED will start blinking. Go to the wireless settings on your device, locate "A1 RrR," and click to pair.


6. TF Card Mode:

1. Supports TF cards up to 128GB.
2. Insert a TF card, and the speaker will automatically play the audio files stored on it.
3. If the mobile phone is connected to the "A1 RrR" speaker via wireless, press the "M" button to switch to TF card playback.

1. Parts List

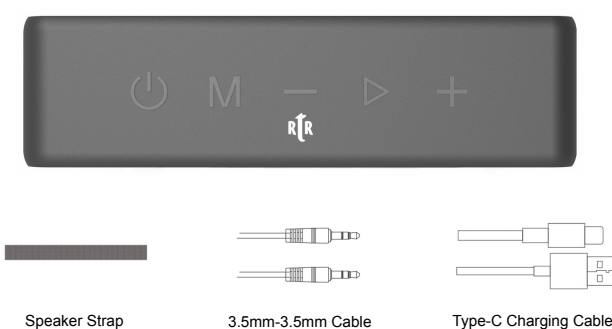

2. Controls & Side Panel

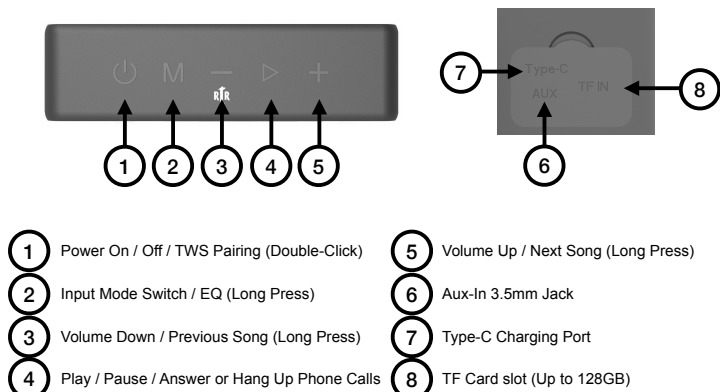

7. TWS Pairing

TWS (True Wireless Stereo) is a technology that allows two separate A1 RrR speakers to pair and synchronize wirelessly, functioning as a stereo pair without any physical connection. In Bluetooth speaker setups, TWS mode creates a stereo sound experience by connecting two speakers wirelessly.

How to Use TWS Mode:

1. **Power on both speakers.** (If either is connected to a Bluetooth device, first disconnect the Bluetooth connection.)
2. **Double-click** the "⏻" button on one of the speakers to enter TWS pairing mode.
3. After pairing is successful, you will hear a beep, and the yellow indicators on both speakers will light up.
4. Turn on the Bluetooth function on your phone or other Bluetooth device, find and pair with the speaker named "A1 RrR."
5. Once TWS pairing is complete, the A1 RrR speakers will automatically pair in TWS mode each time they are powered on, without needing to repeat this process.

Resetting TWS Pairing:

- If the A1 RrR speakers have been previously paired in TWS mode, press and hold the "M" button for 5 seconds to reset them.
- After resetting, restart the speakers and follow steps 1–4 to re-establish the TWS pairing.

Notes:

- In TWS mode, only the main speaker supports the hands-free function; the secondary speaker is muted during calls.
- You can still switch sound effects while in TWS mode.

Troubleshooting

Bluetooth Connection Issues

- **Solid Blue Light (No Flashing):**
If the indicator light on the power button is solid blue, it means the A1 RrR is already connected to another device. To force disconnect:
 1. Press and hold the mode button "▶" for 2 seconds.
 2. After 3 seconds, the indicator light will start flashing blue again, indicating pairing mode.
 3. You can now search for "A1 RrR" on your phone, computer, or laptop and pair the devices.
- **Flashing Blue Light:**
If the power button indicator light is flashing blue, the speaker is in pairing mode. If your device cannot find "A1 RrR," try the following:
 1. Turn off the speaker.
 2. Restart the device and the speaker, then attempt to pair again.

Speaker Won't Power On

- The speaker may be out of battery. Please charge it before use.
- If the speaker has not been used for over a month, charge it for at least 5 minutes before attempting to turn it on.

Aux-In/TF Card Playback Issues

- Click the "M" button to switch between Bluetooth, Aux-in, and TF card modes.

TWS Connection Issues with Two A1 RrR Speakers

- Press and hold the "M" button on both speakers for 5 seconds to reset the pairing.
- After resetting, restart the devices and follow steps 1–4 from the TWS pairing instructions to successfully connect the two speakers.

Contact Us

If you encounter any other issues or have additional questions, please feel free to reach out to our professional customer service team. We are dedicated to providing the best support.

- Technical Support Website: <https://www.bicamerica.com/support>
- Technical Support Phone: +1 877-558-4242 (4BIC)



B+I-C America. All rights reserved.
RrR is a registered trademark of B+I-C America

B+I-C America
4982 4th Street
Irwindale, CA 91706
www.bicamerica.com
Tech Support:
1-877-558-4242(4BIC)